
Triax


TD 110 dish




Assembly and mounting instructions
Montageanleitung
Notice de montage
Montagevejledning




1

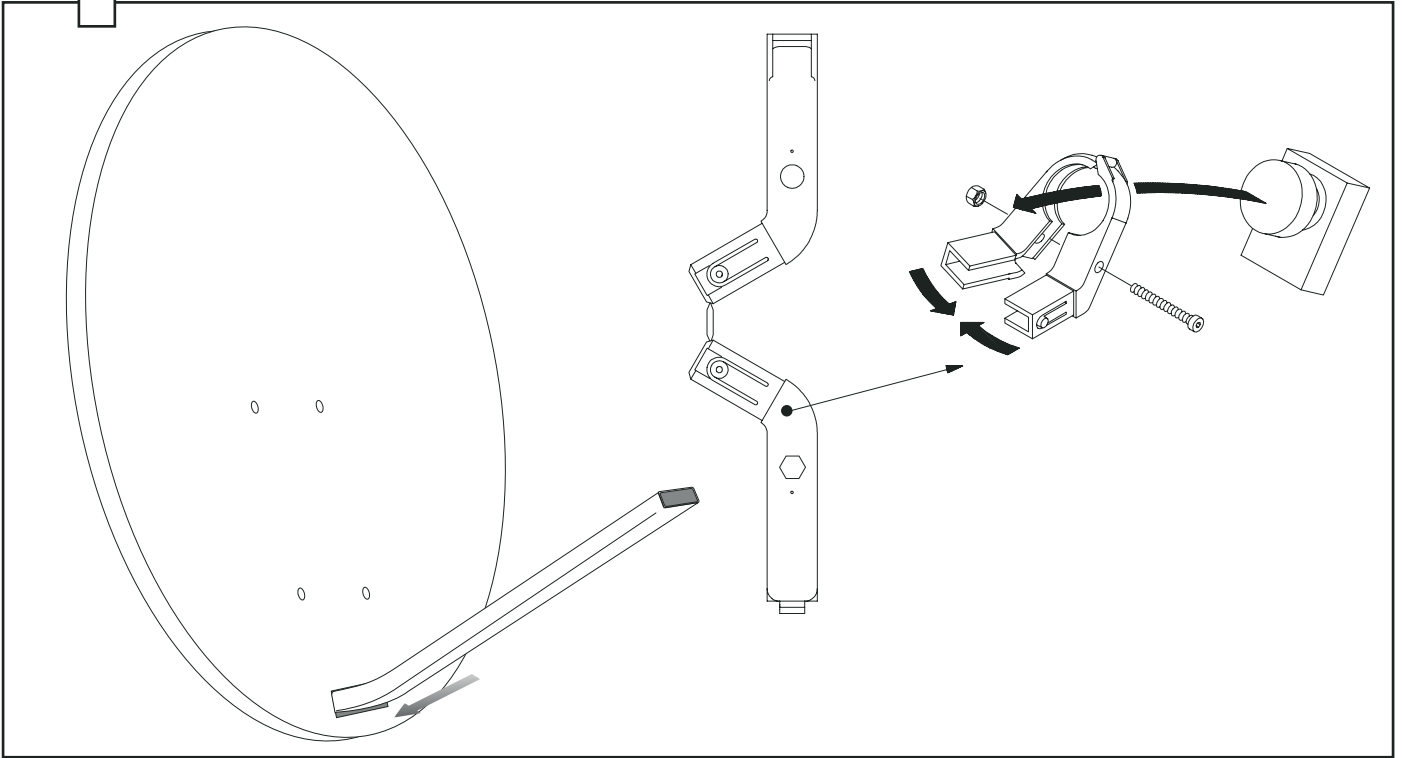


2

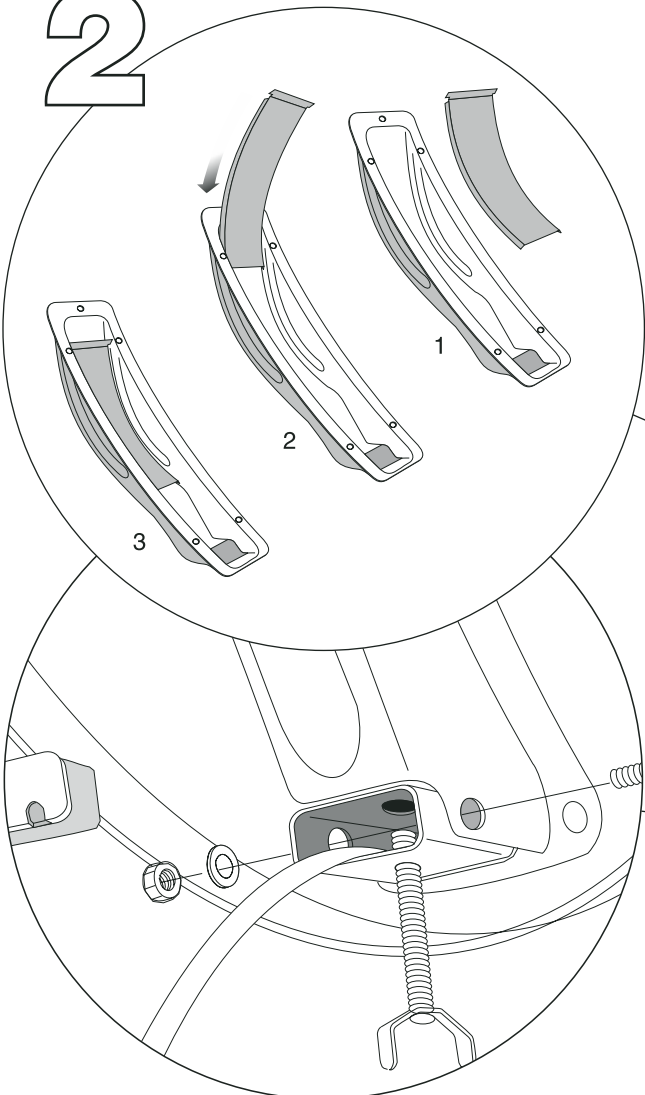


3

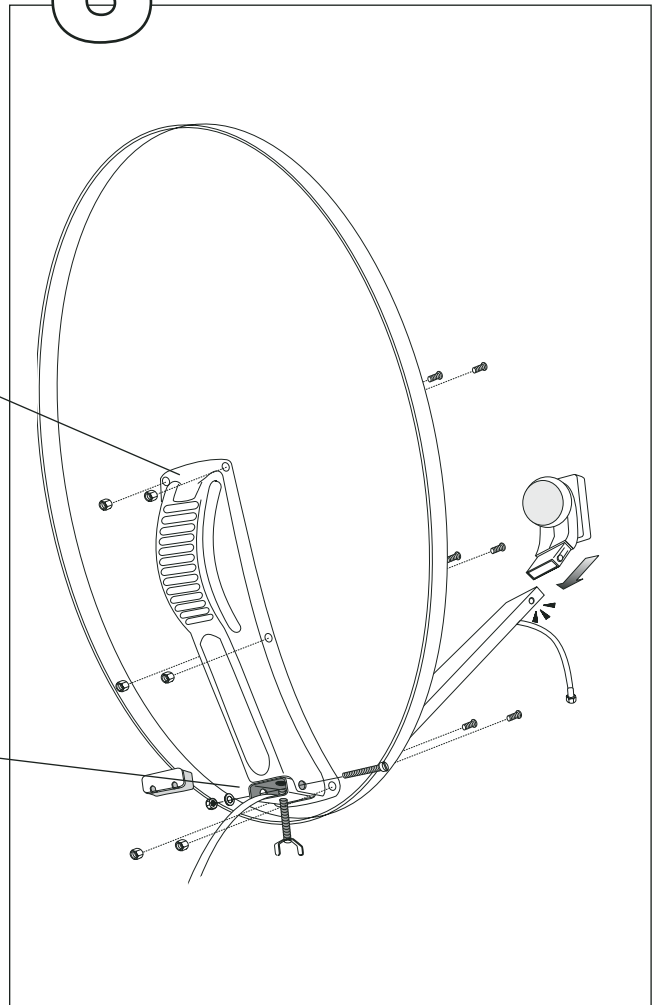


4

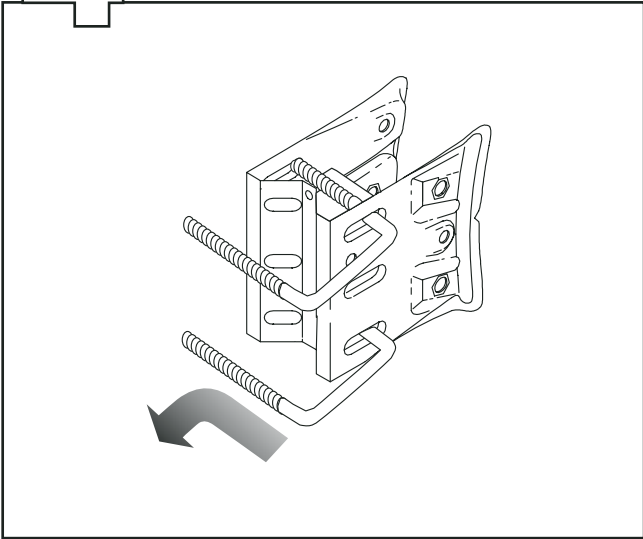


5

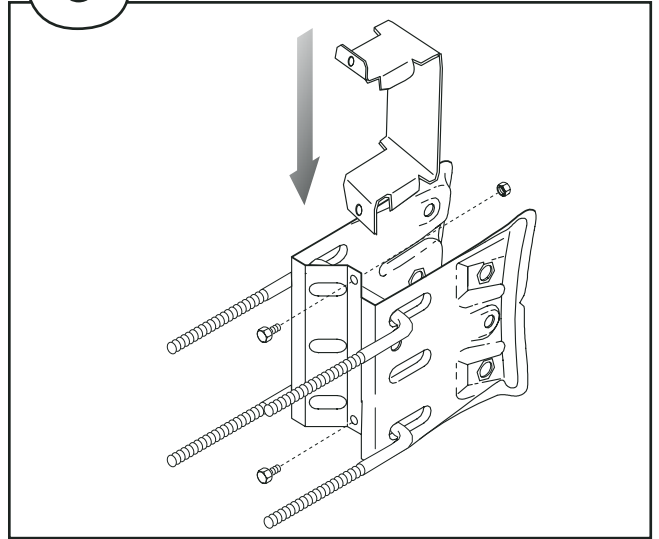


6

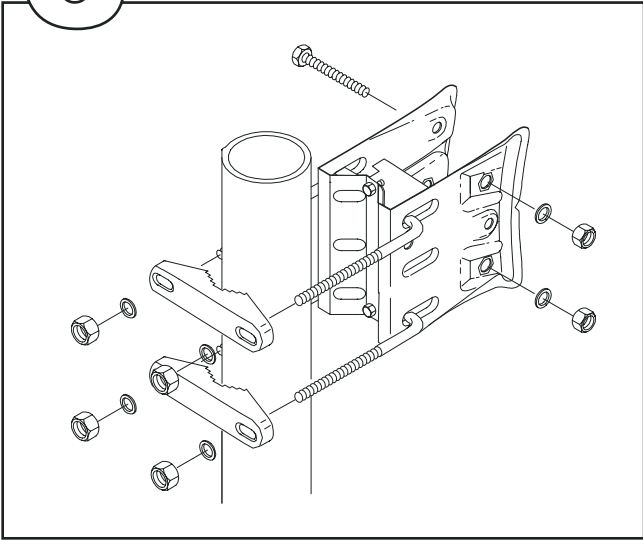


7

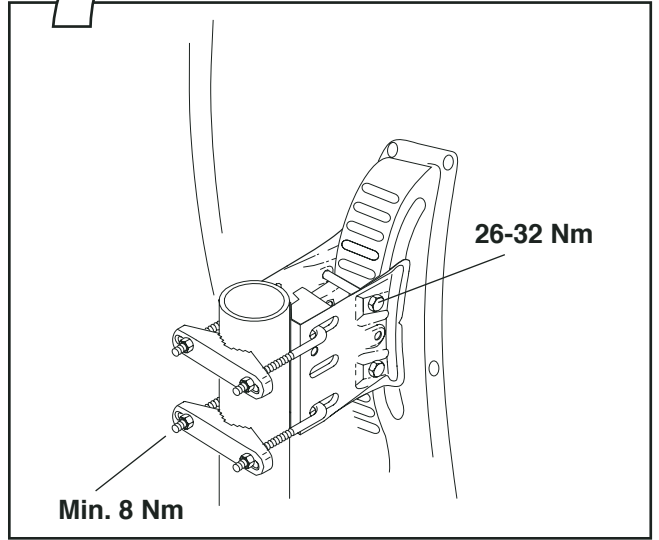

8

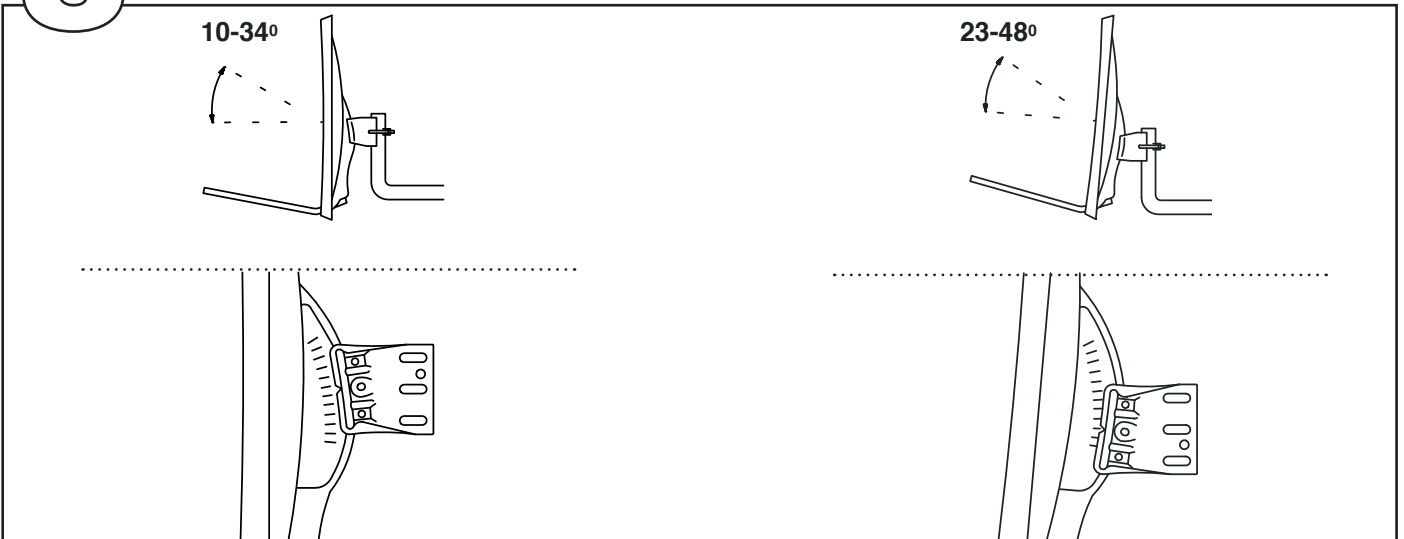


Astra
Satellite Position 28.2° East

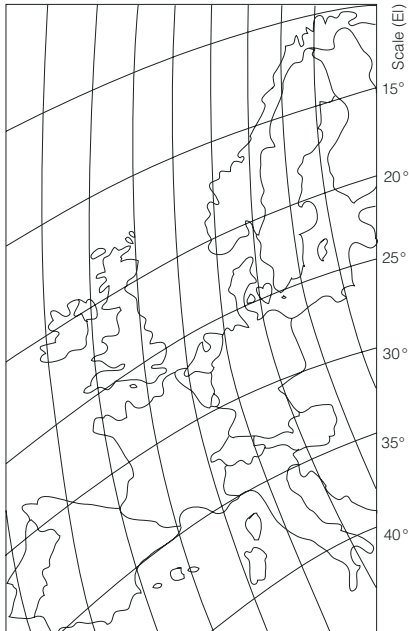


Az 130° 135° 140° 145° 150° 155°

Astra
Satellite Position 19.2° East

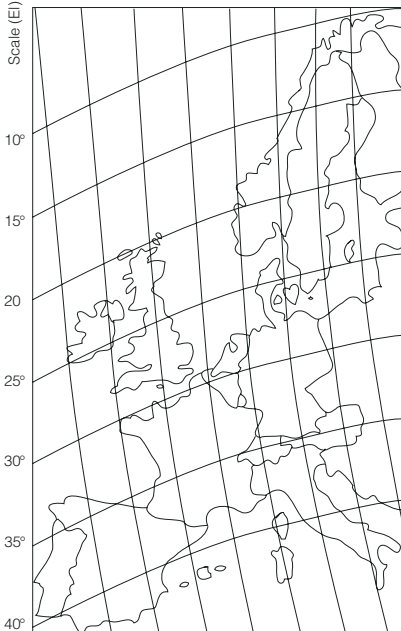


Az 145° 150° 155° 160° 165° 170° 175°

Eutelsat - Hot Bird
Satellite Position 13° East

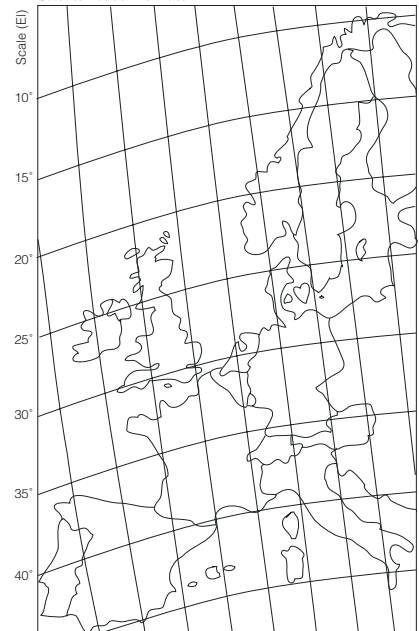


Scale (Az) 150° 155° 160° 165° 170° 175° 180° 185°

Eutelsat
Satellite Position 10° East

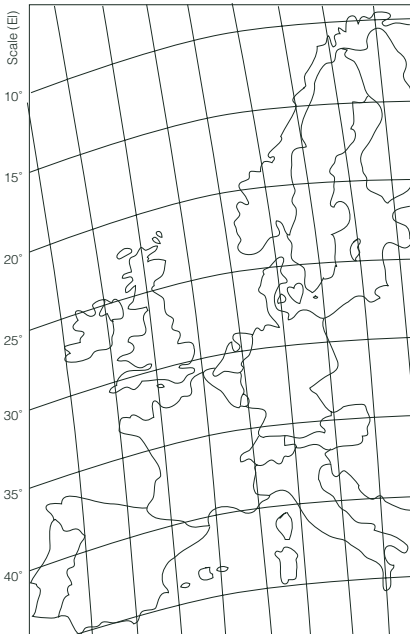


Scale (Az) 155° 160° 165° 170° 175° 180° 185° 190°

Sirius
Satellite Position 5° East

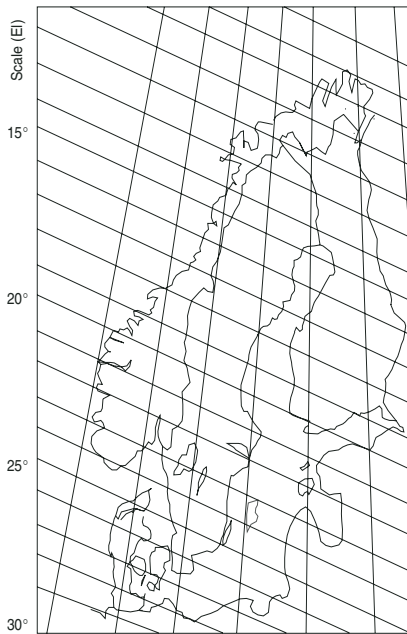


Az 185° 190° 195° 200° 205°

Eutelsat - Thor
Satellite Position 1° West

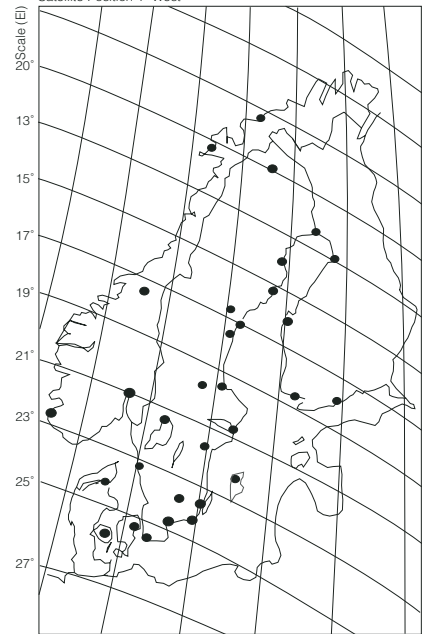


Scale (Az) 195° 200° 205° 210° 215°

Eutelsat - Telecom 2A - 2B
Satellite Position 8°/5° West

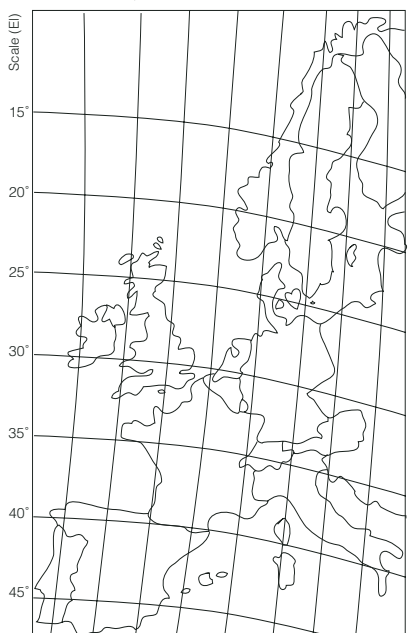

Scale (Az) 180° 185° 190° 195° 200° 205° 210°

Hispasat
Satellite Position 30° West

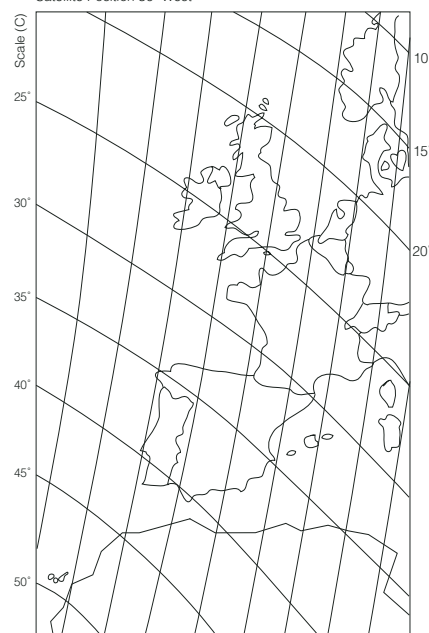

Scale (Az) 210° 215° 220° 225° 230° 235°

